

38600R FIXED NOZZLE PUMP INSTALLATION & CLEANING INSTRUCTIONS

INSTALLATION INSTRUCTIONS:

1. Unscrew Nut to fit pump to a cap or cover
2. Slip cap over small end of pump valve core
3. Screw down Nut to small end of valve core until tight

DISASSEMBLY INSTRUCTIONS:


1. Pull out dip tube
2. Unscrew nut and remove cap or cover
3. Unscrew body assembly from valve core
4. Gently pull valve off of valve core
5. Reverse steps to reassemble

**NOTE: DO NOT remove piston from body assembly.
It does not come apart!**

CLEANING INSTRUCTIONS:

1. Daily, pump warm soapy water several times through the pump
2. Pump clean water through the pump at least three times or until completely flushed for sufficient cleaning
3. If needed, the pump can be easily disassembled (see disassembly instructions above) and the parts washed by hand using a #40154 brush

NOTE: NEVER scrape the inside of pump with sharp objects

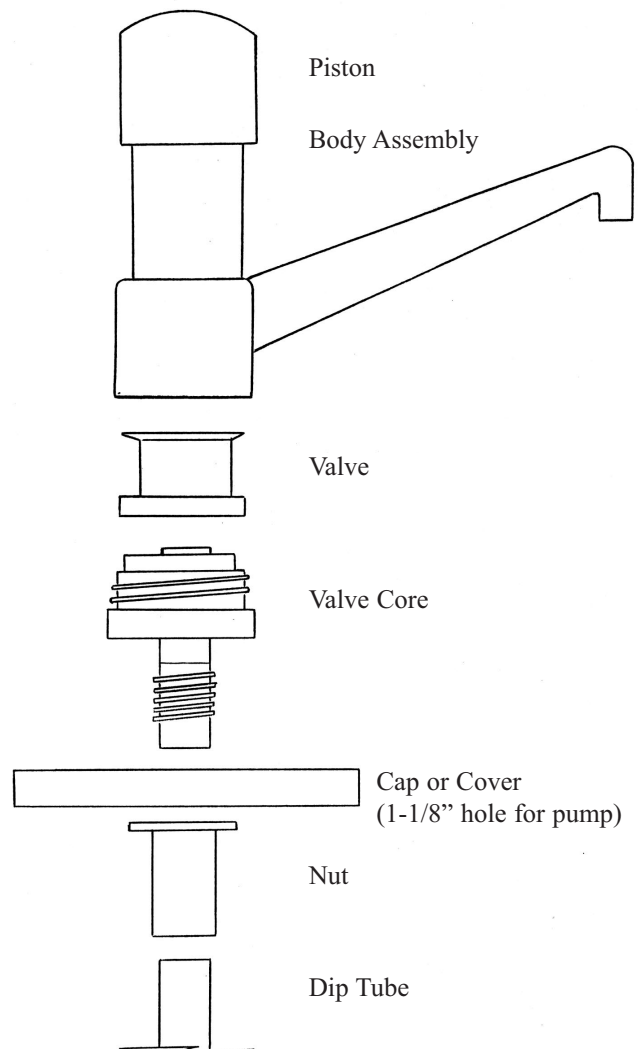

Worldwide Headquarters:
P.O. Box 53006
Oklahoma City, Oklahoma 73152-3006
(405) 475-5600 • FAX (405) 475-5607
1-800-654-8210
website: www.carlislefsp.com
#104T112016

European Distribution Center:
Edisonstraat 84, P.O. Box 110
6900 AC Zevenaar, The Netherlands
Tel +31/(0)316-596550 • Telex 45642
FAX +31/(0)316-340168
4/01

CARLISLE
FoodService Products