


Assembly Instructions: Checkout Shields

PRODUCT NUMBERS: 2424CS07, 3636CS07

Parts Included:

1 Acrylic Shield, 4 Screws, 4 Rubber Washers,
1 Roll Double-Sided Tape

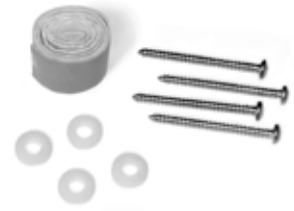

INSTALLING WITH SCREWS:

Step 1 – Figure A

Remove white film from both sides of shield.

Step 2 – Figure B

Align Shield to desired height on counter.

Step 3 – Figure C

Pick first, second, third and fourth attachment point and mark.

Step 4

Place Shield to the side.

Step 5 – Figure D

Make pilot holes using a 9/64" drill bit to each attachment point; remove debris from hole.

Step 6 – Figure B

Hold Shield in place.

Step 7 – Figure E

Attach rubber washer to screw and drill first screw into place.

Step 8 – Figure F



Using a level, make sure Shield is level.

Step 9 – Figures E & G

Attach rubber washers to second, third and fourth screws and drill in place.

Step 10 – Figure H

Clean Shield. **DO NOT** use products with ammonia or abrasive cleaners.

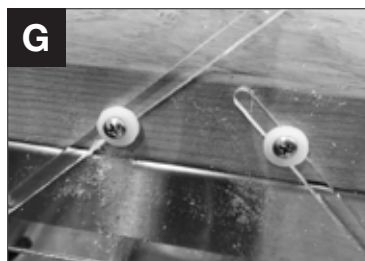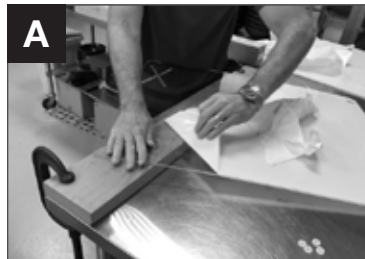

Continued

Assembly Instructions: Checkout Shields

PRODUCT NUMBERS: 2424CS07, 3636CS07

INSTALLING WITH DOUBLE-SIDED TAPE:

Step 1 – Figure A

Remove white film from both sides of shield.

Step 2 – Figure B

Clean Shield and designated area.

DO NOT use products with ammonia or abrasive cleaners.

Step 3 – Figure C

Slowly remove backing from one side of tape.

Step 4 – Figure D

Align tape to desired location on Shield.

Step 5 – Figure E

Press firmly to seal.

Step 6

Cut off excess tape.

Step 7 – Figure C

Slowly remove remaining backing from tape.

Step 8 – Figure F

Align Shield to desired height on counter.

Step 9 – Figure G

Firmly apply pressure across entire length of tape to seal to counter.

Step 10 – Figure B

Clean Shield. **DO NOT** use products with ammonia or abrasive cleaners.

